

Größenschlüssel für Hosenträger							
Größe HT	Größe Hose						
	normal	K	KK	KKK	L	LL	LLL
1	38-50	38-50	38-50	38-58	-	-	-
2	52-58	52-58	52-58	60-74	38-50	38-50	-
3	60-74	60-74	60-74	-	52-58	52-58	38-50
4	-	-	-	-	60-74	60-74	52-74