



Adapter



You need a Nipple with 1/4 in NPT M (22-890667), Paratech coupling 1/4 in NPT F (22-890711) and some PTFE tape



Step 1: The tape must be scrolled on the Nipple




Step 2: The Nipple is now ready to be screwed into the Paratech coupling. Make sure that the tape is tight. If the air can ooze, repeat step 1.

Paratech pressure regulator to Vetter Air hose



How to connect the Vetter air hose to the Paratech pressure regulator

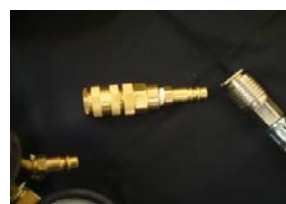

You need, Paratech pressure regulator, Vetter air hose and the adapter




Step 1: Connect the adapter to the Paratech pressure regulator



Step 2: Secure the lock



Step 4: Connect the Vetter air hose to the adapter

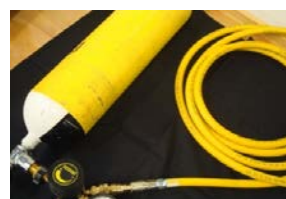

You are now ready to use the Vetter air hose with the Paratech pressure regulator

Paratech Incorporated

P.O. Box 1000, Frankfort, IL 60423 USA
Customer Service: 800.435.9358
Phone: 815.469.3911 Fax: 815.469.7748

www.paratech.us E-mail: paratech@paratech.us

Paratech Europe, Branch of Paratech Inc.

P.O. Box 174, 5260 Odense S, Denmark
Phone: +45.66.11.24.22 Fax: +45.66.11.24.32
Customer Service: 800.435.9358

www.paratech.us E-mail: paratech@paratech.dk



Vetter controller to Paratech air hose (air in)



How to connect the Paratech air hose to the Vetter controller (air in)



You need, Paratech air hose, Vetter controller and the adapter



Step 1: Connect the adapter into the Vetter controller input



Step 2: Connect the Paratech air hose to the adapter.



Step 3: Secure the lock



You are now ready to use the Paratech air hose with the Vetter controller

Paratech Incorporated

P.O. Box 1000, Frankfort, IL 60423 USA
Customer Service: 800.435.9358
Phone: 815.469.3911 Fax: 815.469.7748

www.paratech.us E-mail: paratech@paratech.us

Paratech Europe, Branch of Paratech Inc.

P.O. Box 174, 5260 Odense S, Denmark
Phone: +45.66.11.24.22 Fax: +45.66.11.24.32
Customer Service: 800.435.9358

www.paratech.us E-mail: paratech@paratech.dk



Vetter controller to Paratech air hose (air out)



How to connect the Paratech air hose to the Vetter controller (air out)



You need, Paratech air hose, Vetter controller and the adapter



Step 1: Connect the Paratech air hose on the adapter.



Step 2: Secure the lock



Step 3: Connect the adapter to the Vetter controller output



You are now ready to use the Paratech air hose with the Vetter controller

Paratech Incorporated

P.O. Box 1000, Frankfort, IL 60423 USA
Customer Service: 800.435.9358
Phone: 815.469.3911 Fax: 815.469.7748

www.paratech.us E-mail: paratech@paratech.us

Paratech Europe, Branch of Paratech Inc.

P.O. Box 174, 5260 Odense S, Denmark
Phone: +45.66.11.24.22 Fax: +45.66.11.24.32
Customer Service: 800.435.9358

www.paratech.us E-mail: paratech@paratech.dk



Paratech controller to Vetter air hose (air in)



How to connect the Vetter air hose to the Paratech controller (air in)



You need, Vetter air hose, Paratech controller and the adapter



Step 1: Connect the Paratech air hose to the adapter.



Step 2: Secure the lock



Step 3: Connect the adapter to the Paratech controller input



Step 4: Secure the lock (controller input)



You are now ready to use the Vetter air hose with the Paratech controller

Paratech Incorporated

P.O. Box 1000, Frankfort, IL 60423 USA
Customer Service: 800.435.9358
Phone: 815.469.3911 Fax: 815.469.7748

www.paratech.us E-mail: paratech@paratech.us

Paratech Europe, Branch of Paratech Inc.

P.O. Box 174, 5260 Odense S, Denmark
Phone: +45.66.11.24.22 Fax: +45.66.11.24.32
Customer Service: 800.435.9358

www.paratech.us E-mail: paratech@paratech.dk



Paratech controller to Vetter air hose (air out)




How to connect the Vetter air hose to the Paratech controller (air out)



You need, Vetter air hose, Paratech controller and the adapter



Step 1: Connect the Vetter air hose to the adapter.

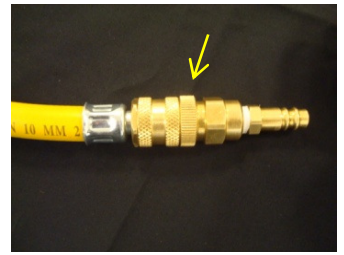

Step 2: Secure the lock



Step 3: Connect the adapter into the Paratech controller output



Step 4: Secure the lock (controller output)



You are now ready to use the Vetter air hose with the Paratech controller

Paratech Incorporated

P.O. Box 1000, Frankfort, IL 60423 USA
Customer Service: 800.435.9358
Phone: 815.469.3911 Fax: 815.469.7748

www.paratech.us E-mail: paratech@paratech.us

Paratech Europe, Branch of Paratech Inc.

P.O. Box 174, 5260 Odense S, Denmark
Phone: +45.66.11.24.22 Fax: +45.66.11.24.32
Customer Service: 800.435.9358

www.paratech.us E-mail: paratech@paratech.dk



Paratech air lifting bag to Vetter air hose



How to connect the Vetter air hose to the Paratech air lifting bag



You need, Vetter air hose, Paratech air lifting bag and the adapter




Step 1: Connect the adapter to the Paratech air lifting bag



Step 2: Secure the lock



Step 3: Connect the adapter to the Vetter air hose

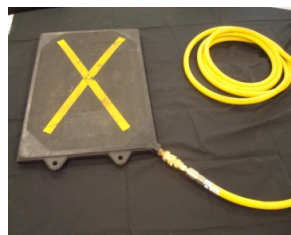

You are now ready to use the Paratech air lifting bag with the Vetter air hose

INFO

Another solution is to change the Nipple on the Paratech Maxiforce lift bag.

For a big lift bag : Nipple with 1/8 in NPT M (Part. No. 22-890668)

For a small lift bag: Nipple with 1/4 in. NPT M (Part. No. 22-890667)

Paratech Incorporated

P.O. Box 1000, Frankfort, IL 60423 USA
Customer Service: 800.435.9358
Phone: 815.469.3911 Fax: 815.469.7748

www.paratech.us E-mail: paratech@paratech.us

Paratech Europe, Branch of Paratech Inc.

P.O. Box 174, 5260 Odense S, Denmark
Phone: +45.66.11.24.22 Fax: +45.66.11.24.32
Customer Service: 800.435.9358


www.paratech.us E-mail: paratech@paratech.dk



Vetter air lifting bag to Paratech air hose




How to connect the Paratech air hose to the Vetter air lifting bag

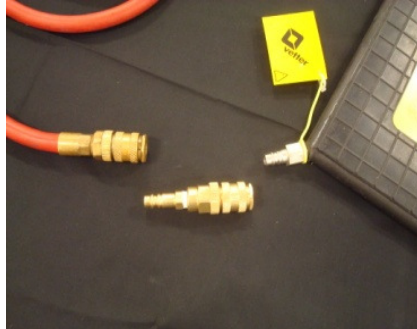

You need, Paratech air hose, Vetter air lifting bag and the adapter



Step 1: Connect the adapter to the Vetter air lifting bag

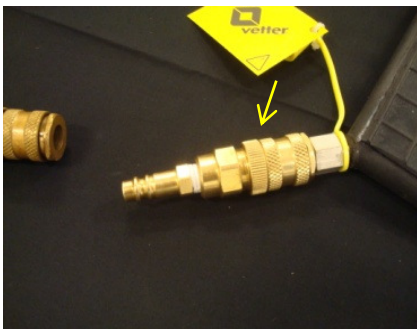

Step 2: Secure the lock



Step 3: Connect the adapter to the Paratech air hose



Step 4: Secure the lock



You are now ready to use the Vetter air lifting bag with the Paratech air hose

Paratech Incorporated

P.O. Box 1000, Frankfort, IL 60423 USA
Customer Service: 800.435.9358
Phone: 815.469.3911 Fax: 815.469.7748

www.paratech.us E-mail: paratech@paratech.us

Paratech Europe, Branch of Paratech Inc.

P.O. Box 174, 5260 Odense S, Denmark
Phone: +45.66.11.24.22 Fax: +45.66.11.24.32
Customer Service: 800.435.9358

www.paratech.us E-mail: paratech@paratech.dk